



1. How to flash M5 ECU

- i. Click  to update the database (only for first time software installation or new base map update) → connect "iLink" cable with ECU & PC.
- ii. Click  to refresh connection port → Turn - On ignition power → Click  to connect with ECU.
- iii. Select the manufacturer → Select vehicle model → Select the suitable base map.
- vi. Click  to flash to the ECU → After flashing process completed, please turn - Off ignition power for 10 seconds to complete the flash.

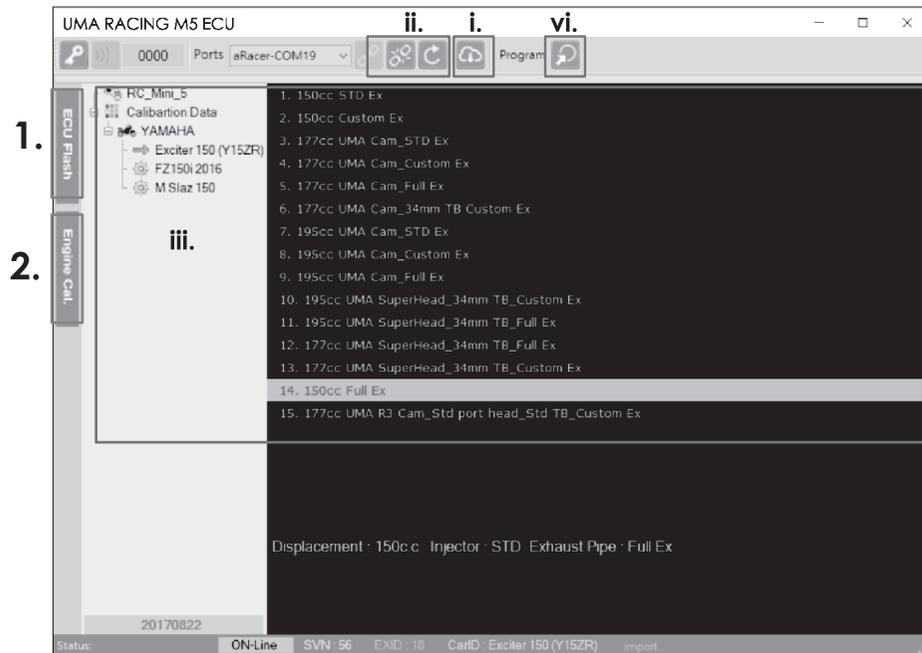

Extended Functions With Optional Accessories

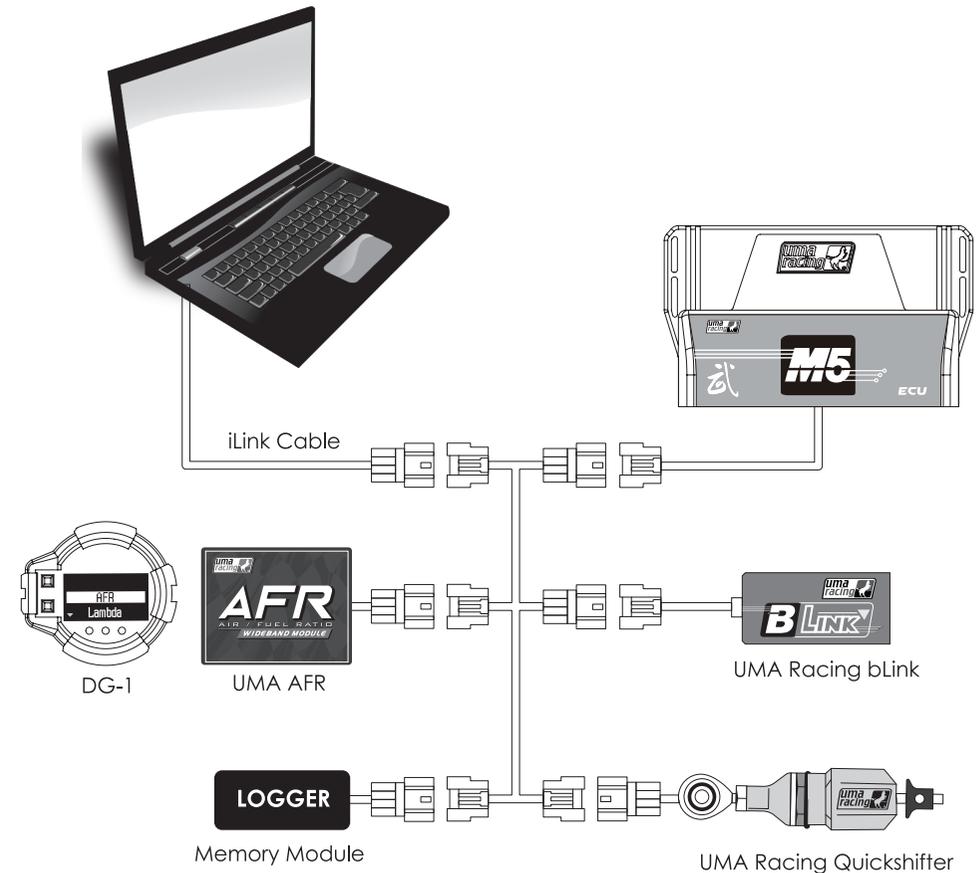

2. Engine Calibration

- i. Please use iLink or blink to connect with M5 ECU.
- ii. Please check UMA Tune user manual.
- iii. Download from www.umaracing.com.my




UMA Tune Application Download

Android Phone:
Download UMA Tune from Google Play.



iPhone:
Download UMA Tune from App Store.

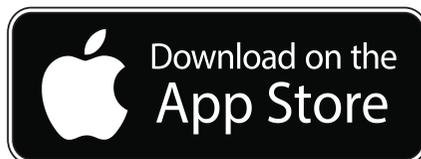

UMA Tune user manual & M5 ECU flash tool can be downloaded from official UMA Racing website.

If you want to know more detailed product information, please visit our facebook or official UMA Racing website:

 **umaracing (Malaysia)**

<http://www.umaracing.com.my>




M5 ECU (SCOOTER) USE AND INSTRUCTIONAL MANUAL


Thank you for purchasing this product. Please read the instruction carefully for details.

ATTENTION

1. Upon installation make sure the environment is clean as it may affect its precision.
2. We shall not be held liable and shall not accept any liability, obligation or responsibility whatsoever for any damage on the item during assembly and disassembly.
3. During tuning or calibrating ensure to use a safe and controlled environment.

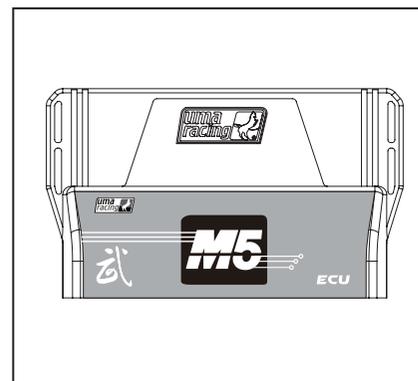

M5 ECU

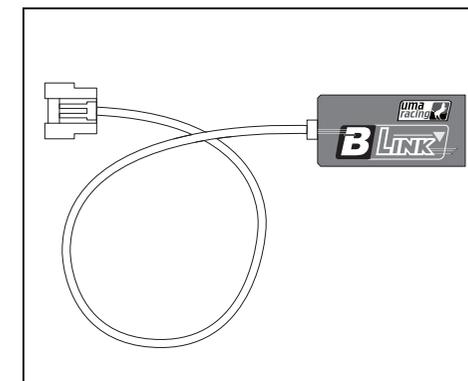

bLink

